


# Iron-on Patch Instructions


Things to prepare: Iron\*, towel or cloth. \*Iron-on patches adhere best to cotton products. Please refer to your garment's label.  
\*If you're using a heat press, please set temperature to medium and follow steps 4 and 5. Border will hang freely unless you select option "iron-on backing extending to border" in CREATE.

1

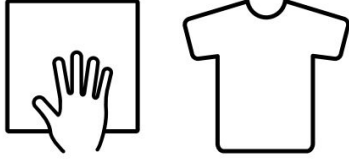


Lay the clean garment on a flat surface.

2

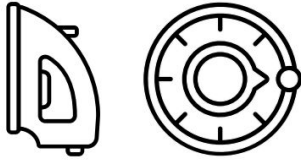

Turn iron on. Ensure steam is off with no water in the iron. Set temperature to the right fabric setting.

3

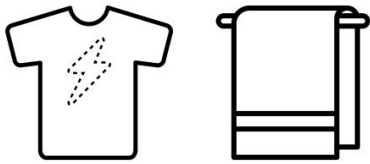

Place the patch (facing up) onto garment where desired. Place a thin (cotton) cloth over the patch area.

Tip #1: If your patch has a border, apply more heat pressure to adhere edges completely. Border will hang freely unless you select option "iron-on backing extending to border" in CREATE.

THE STUDIO

# Iron-on Patch Instructions

Things to prepare: Iron\*, towel or cloth. \*Iron-on patches adhere best to cotton products. Please refer to your garment's label.  
\*If you're using a heat press, please set temperature to medium and follow steps 4 and 5. Border will hang freely unless you select option "iron-on backing extending to border" in CREATE.

4



Apply pressure with the iron in circular motions for 10-30 secs. over patch area to ensure adhesion. Allow patch to cool.

5



Flip the garment inside-out, apply direct heat (or place a thin cloth over it to avoid burnt effect on your garment before applying heat) with iron onto the areas until adhered. Once again, allow patch to cool.

6



Check if the patch has adhered completely. (Repeat steps 4-6 if necessary.) Enjoy your newly patched garment!

Tip #2: Materials like mesh, coated and ribbed fabric or any material with stretch or rough surface may not be suitable for an iron-on item. For leather patch, skip step 4 (to avoid leather to be burnt by direct heat from front side).

THE STUDIO